



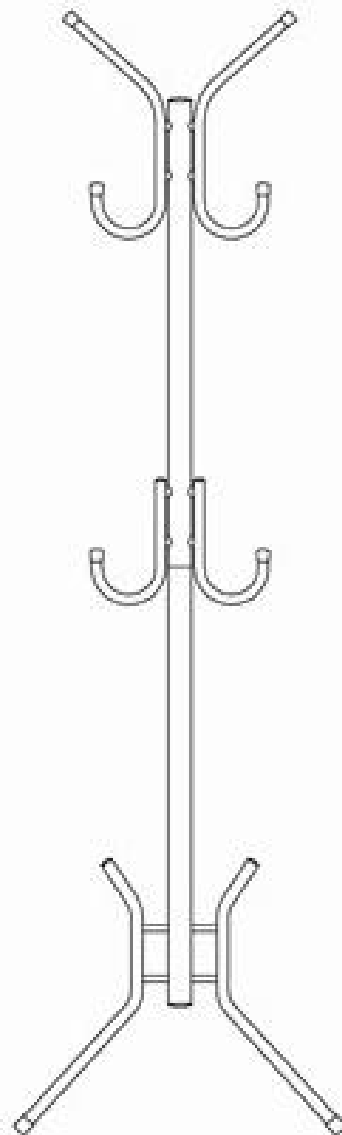

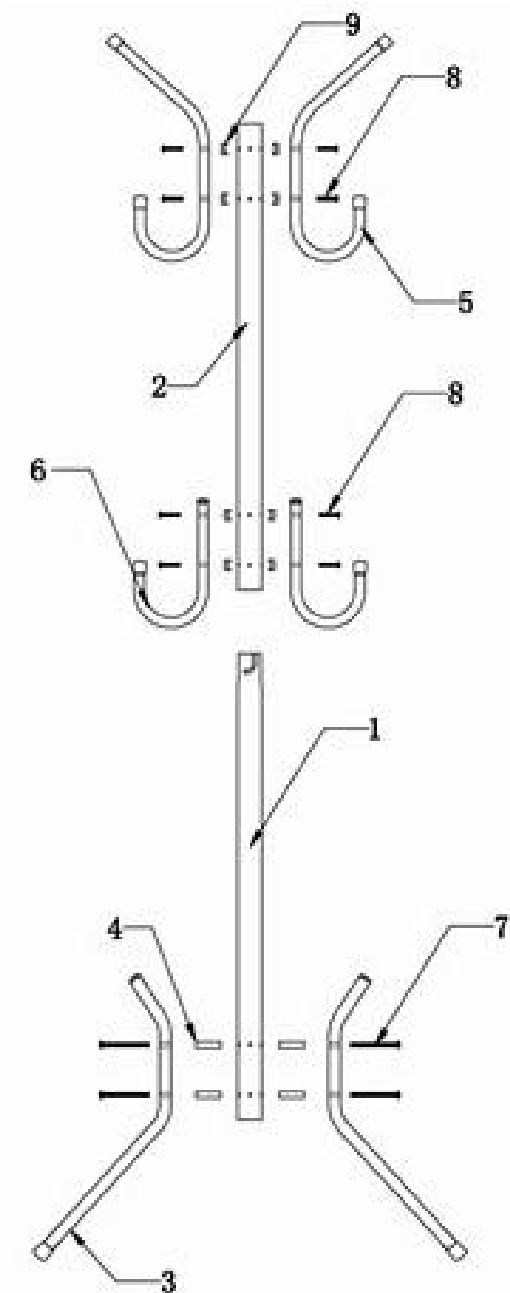






# ИНСТРУКЦИЯ ЗА МОНТАЖ НА МЕТАЛНА ЗАКАЧАЛКА CARMEN 104



№	Вид	Бр.
1		1
2		1
3		3
4		6
5		4
6		3
7	 M6*70	6
8	 M6*30	14
9		14